

NFPA 80A

Recommended Practice for

Protection of Buildings from Exterior Fire Exposures

2001 Edition

Copyright © 2001, National Fire Protection Association, All Rights Reserved

This edition of NFPA 80A, *Recommended Practice for Protection of Buildings from Exterior Fire Exposures*, was prepared by the Technical Committee on Exposure Fire Protection and acted on by NFPA at its May Association Technical Meeting held May 13–17, 2001, in Anaheim, CA. It was issued by the Standards Council on July 13, 2001, with an effective date of August 2, 2001, and supersedes all previous editions.

This edition of NFPA 80A was approved as an American National Standard on August 2, 2001.

Origin and Development of NFPA 80A

In 1924, the NFPA Committee on Protection of Openings in Walls and Partitions developed a *Suggested Practice for Protection Against Exposure of Openings in Fire-Resistive Walls* to meet the demand for a method of evaluating the severity of exposure and a uniform practice for specifying protection. This pamphlet was submitted as a tentative recommended practice and was adopted by NFPA in 1925.

In 1930, this pamphlet was added to the *Standard for the Protection of Openings in Walls and Partitions Against Fire* as an appendix, but it was not published until the 1944 edition of the *National Fire Codes*[®], Vol. III, except as part of the “NFPA Proceedings.” It also was summarized in the 9th edition (1941) of the *Handbook of Fire Protection*.

In 1963, a new NFPA Committee on Exposure Fire Protection was formed and was charged with the task of updating the 1925 edition of NFPA 80A. The committee submitted a complete revision of the 1925 text to the Association for tentative adoption in 1967 and a revision of the tentative text for official adoption in 1970.

In the 1987 edition, there were substantive and editorial changes. In 1993, revisions continued to examine the effect of fire on an exposed structure and calculative methods to

help ensure a reduction in fire impact due to exposure fires.

In the 1996 edition, some editorial changes were made in addition to changes in the example in Appendix B.

Revisions for the 2001 edition were mainly editorial to comply with the NFPA *Manual of Style*, 2000 edition, for NFPA Technical Committee Documents. Language was added to recognize new technology such as *listed window sprinklers*.

Technical Committee on Exposure Fire Protection

Edward J. Kaminski, *Chair*
Schirmer Engineering Corporation, IL [SE]

Peter J. Barbadoro, Fire Smart Building Technology, Inc., MA [IM]

Kenneth E. Bland, American Forest & Paper Association, DC [M]

Russell P. Fleming, National Fire Sprinkler Association, NY [M]

Gene L. Hertz, Rohm and Haas Co., PA [M]

Yvonne M. Keafer, Sedgwick James of Pennsylvania, Inc., PA [I]

Joseph J. Messersmith, Jr., Portland Cement Association, VA [M]

Igor Oleszkiewicz, National Research Council of Canada, ON [RT]

Donald Lee Parsley, Parsley Consulting Engineers, CA [SE]

Mark J. Petrone, Connecticut Interlocal Risk Management Agency, CT [I]

James W. Quinnette, Nuclear Service Organization, DE [I]

Robert J. Richter, Construction Domain Consultant, VA [SE]

Christopher A. Spencer, FM Global, MA [I]

Alternates

Richard J. Davis, FM Global, MA [I]
(Alt. to C. A. Spencer)

Gene B. Endthoff, National Fire Sprinkler Association, IL [M]
(Alt. to R. P. Fleming)

Andrew Kim, National Research Council of Canada, ON [RT]
(Alt. to I. Oleszkiewicz)

Stephen V. Skalko, Portland Cement Association, GA [M]
(Alt. to J. J. Messersmith, Jr.)

E. Hayden Smith, Nuclear Service Organization, DE [I]
(Alt. to J. W. Quinnette)

James D. Lake, NFPA Staff Liaison

Committee Scope: This Committee shall have primary responsibility for documents on protection of buildings from fire exposure, excluding installation details for outside sprinklers, which are handled by the Technical Committee on Automatic Sprinklers.

This list represents the membership at the time the Committee was balloted on the final text of this edition. Since that time, changes in the membership may have occurred. A key to classifications is found at the back of the document.

NOTE: Membership on a committee shall not in and of itself constitute an endorsement of the Association or any document developed by the committee on which the member serves.

NFPA 80A
Recommended Practice for
Protection of Buildings from Exterior Fire Exposures
2001 Edition

NOTICE: An asterisk (*) following the number or letter designating a paragraph indicates that explanatory material on the paragraph can be found in Annex A.

A reference in brackets [] following a section or paragraph indicates material that has been extracted from another NFPA document. The complete title and edition of the document the material is extracted from is found in Annex C. Editorial changes to extracted material consist of revising references to an appropriate division in this document or the inclusion of the document number with the division number when the reference is to the original document. Requests for interpretations or revisions of extracted text shall be sent to the appropriate technical committee.

Information on referenced publications can be found in Chapter 2 and Annex C.

Chapter 1 Administration

1.1 Scope.

This recommended practice addresses separation distances between buildings to limit exterior fire spread based on exterior openings and other construction features.

1.2 Purpose.

These recommendations are intended to provide a reasonable level of protection for combustibles within and on the exterior of a building exposed to an external building fire, while contemplating effective fire-fighting activity.

1.3 Application.

Copyright NFPA

The hazards of exposure to a structure from adjacent exposing fires and the multiple conditions under which such exposure can occur make it impossible to develop a table, formula, or set of rules that adequately covers all conditions. The user of this recommended practice should become familiar with the general theory of radiation exposure hazard as outlined in A.3.3.2, Exposure Severity.

1.4 Units and Formulas.

Metric units of measurement in this recommended practice are in accordance with the modernized metric system known as the International System of Units (SI). The liter unit, which is outside of but recognized by SI, is commonly used in fire protection and is therefore used in this recommended practice. In this document, values for measurements are expressed in SI units followed by an equivalent English unit. The first stated value should be regarded as the recommendation because the given equivalent value might be approximate.

Chapter 2 Referenced Publications

2.1 General.

The documents or portions thereof listed in this chapter are referenced within this recommended practice and should be considered part of the recommendations of this document.

2.1.1 NFPA Publications.

National Fire Protection Association, 1 Batterymarch Park, P.O. Box 9101, Quincy, MA 02269-9101.

NFPA 13, *Standard for the Installation of Sprinkler Systems*, 1999 edition.

NFPA 80, *Standard for Fire Doors and Fire Windows*, 1999 edition.

NFPA 255, *Standard Method of Test of Surface Burning Characteristics of Building Materials*, 2000 edition.

2.1.2 Other Publication.

2.1.2.1 ASTM Publication.

American Society for Testing and Materials, 100 Barr Harbor Drive, West Conshohocken, PA 19428-2959.

ASTM E 136, *Standard Test Method for Behavior of Materials in a Vertical Tube Furnace at 750°C*.

Chapter 3 Definitions

3.1 General.

The definitions contained in this chapter should apply to the terms used in this

recommended practice. Where terms are not included, common usage of the terms apply.

3.2 NFPA Official Definitions.

3.2.1* Approved. Acceptable to the authority having jurisdiction.

3.2.2* Authority Having Jurisdiction. The organization, office, or individual responsible for approving equipment, materials, an installation, or a procedure.

3.2.3 Should. Indicates a recommendation or that which is advised but not required.

3.3 General Definitions.

3.3.1 Exposure. The heat effect from an external fire that might cause ignition of, or damage to, an exposed building or its contents.

3.3.2* Exposure Severity. The intensity of an exposing fire.

3.3.3 Noncombustible Material. A material that, in the form in which it is used and under the conditions anticipated, will not ignite, burn, support combustion, or release flammable vapors when subjected to fire or heat. Materials that are reported as passing ASTM E 136, *Standard Test Method for Behavior of Materials in a Vertical Tube Furnace at 750°C*, are considered noncombustible materials. [220:3.1]

3.3.4* Pilot Ignition. The ignition of a material by radiation where a local high-temperature igniting source is located in the stream of gases and volatiles issuing from the exposed material.

Chapter 4 Classification of Exposures and Recommended Separation Distances

4.1 Exposures.

Two types of exposure should be considered, as described in 4.1.1 and 4.1.2.

4.1.1 Exposure to Radiation. Exposure to radiation results from any of the following:

- (1) Radiant energy passing through windows or other openings in the facade of a burning building
- (2) Flames issuing from the windows of a burning building
- (3) Flames issuing from the burning facade of a building

4.1.2 Exposure to Flames. Exposure to flames results from flames issuing from the roof or top of a burning building in cases where the exposed building is higher than the burning building.

4.2 Exposure from Buildings of Greater or Equal Height.

4.2.1 Where a building is exposed by a building of greater or equal height, only the thermal radiation from the walls or wall openings of the exposing building should be considered.

4.2.2 Separation distances should be determined so that pilot ignition of the exposed building or its contents is unlikely, assuming no means of protection are installed in connection with either building.

4.3 Minimum Separation Distance.

4.3.1 General. The minimum separation distances between buildings should be determined using 4.3.2 through 4.3.8 and Table 4.3.7.3 and Table 4.3.8.2.

4.3.2 Width of Exposing Fire.

4.3.2.1 The width of the exposing fire should be considered to be the length in meters (feet) of the exposing wall between interior fire separations (such as partition walls or fire walls) or between exterior end walls where no fire separations exist.

4.3.2.2 Fire separations should have sufficient fire resistance to contain the expected fire.

4.3.3 Height of Exposing Fire.

4.3.3.1 The height of the exposing fire should be regarded as the height in meters (feet) of the number of stories involved in the exposing fire, considering such factors as the building construction, closure of vertical openings, and fire resistance of floors.

4.3.3.2 The relevant fire separations should have a fire resistance sufficient to contain the expected fire.

4.3.4 Percentage of Opening in Exposing Wall Area. The percentage of opening in the exposing wall area should be regarded as the percentage of the exposing wall made up of doors, windows, or other openings within the assumed height and width of the exposing fire.

4.3.4.1 Walls without the ability to withstand fire penetration in excess of 20 minutes should be treated as having 100 percent openings.

4.3.4.2 Walls having the ability to withstand fire penetration for not less than 20 minutes but not exceeding the expected duration of the fire should be treated as having 75 percent openings or the actual percentage of openings, whichever is greater.

4.3.5 Severity.

4.3.5.1 Three levels of exposure severity should be assumed: light, moderate, and severe. Two of the important properties influencing fire severity are as follows:

- (1) The average combustible load per unit of floor area
- (2) The characteristics and average flame spread ratings of the interior wall and ceiling finishes

4.3.5.2 Table 4.3.5.2(a) and Table 4.3.5.2(b) should be used to assess severity based on the properties described in 4.3.5.1, and the more severe of the two classifications should govern.

Table 4.3.5.2(a) Severity of Fire Load

Fire Loading of Floor Area		Classification of Severity
kg/m ²	lb/ft ²	
0–34	0–7*	Light
35–73	8–15	Moderate
≥ 74	≥ 16	Severe

*Excluding any appreciable quantities of rapidly burning materials such as certain foamed plastics, excelsior, or flammable liquids. Where these materials are found in substantial quantities, the severity should be classified as moderate or severe.

Table 4.3.5.2(b) Severity of Interior Wall and Ceiling Finish

Average Flame Spread Rating of Interior Wall and Ceiling Finish ¹	Classification of Severity ²
0–25	Light
26–75	Moderate
≥ 76	Severe

¹See NFPA 255, *Standard Method of Test of Surface Burning Characteristics of Building Materials*.

²Where only a portion of the exposing building has combustible interior finish (e.g., some rooms only, ceiling only, some walls only), this factor is considered when judging severity classification.

4.3.6 Width/Height or Height/Width.

4.3.6.1 Width versus height, w/h , or height versus width, h/w , should be determined as a measure of the configuration of the exposing face and should be expressed as a ratio.

4.3.6.2 The larger of w/h or h/w values should be used.

4.3.7* Determination of Separation Distances.

4.3.7.1 To determine distances, the lesser dimension of either width, w , or height, h , should be multiplied by the guide number and 1.5 m (5 ft) added to the result.

4.3.7.2 Where the I value for the combustible materials used is indicated by appropriate tests not to exceed 12.5 kW/m² (0.3 cal/cm² · sec or 66 Btu/ft² · min), or where I is indicated to be not less than 12.5 kW/m² (0.3 cal/cm² · sec or 66 Btu/ft² · min) and there are no openings in the facade of the exposed building, the percentage openings should be adjusted by multiplying by the ratio of 12.5 kW/m² · I (0.3 cal/cm² · sec · I or 66 Btu/ft² · min · I).

4.3.7.3 Recommended separation distances assume fire department response. Where no organized fire-fighting facilities are available, the distances derived from the guide numbers in Table 4.3.7.3 should be increased by a factor of 3 or less.

Table 4.3.7.3 Guide Numbers for Minimum Separation Distances

Severity						
Percentage of Openings*						
Light	Moderate	Severe	1.0	1.3	1.6	2.0
20	10	5	0.36	0.40	0.44	0.46
30	15	7.5	0.60	0.66	0.73	0.79
40	20	10	0.76	0.85	0.94	1.02
50	25	12.5	0.90	1.00	1.11	1.22
60	30	15	1.02	1.14	1.26	1.39
80	40	20	1.22	1.37	1.52	1.68
100	50	25	1.39	1.56	1.74	1.93
—	60	30	1.55	1.73	1.94	2.15
—	80	40	1.82	2.04	2.28	2.54
—	100	50	2.05	2.30	2.57	2.87
—	—	60	2.26	2.54	2.84	3.17
—	—	80	2.63	2.95	3.31	3.70
—	—	100	2.96	3.32	3.72	4.16

* Where the percentage of openings or width/height or height/width

4.3.8* Exposure from Buildings of Lesser Height.

4.3.8.1 Where the exposing building is of lesser height than the exposed building, the separation distance should first be determined from Table 4.3.7.3.

4.3.8.2 Where the roof assembly of the exposing building is combustile and has no fire resistance rating, means of protection should be provided above the roof level of the exposing building in accordance with Table 4.3.8.2.

Table 4.3.8.2 Minimum Separation Distance for Exposing Buildings with Combustible/Nonrated Roof Assemblies

Number of Stories Likely to Contribute to Flaming Through the Roof	Horizontal Separation Distance or Height of Protection Above Exposing Fire	
	m	ft
1	7.5	25
2	10	33
3	12.5	41
4	15	49

4.3.8.3 Where separation distances derived from Table 4.3.7.3 do not exceed the distances indicated in Table 4.3.8.2, means of protection should be applied on the exposed building wall to a height equal to the separation distance, commencing at the height of the roof of the exposing building.

4.3.8.4 Where the roof of the exposing building has a fire resistance rating sufficient to contain the expected fire (based on the fire loading within the area), no exposure hazard is considered to exist throughout the roof.

4.3.8.5 Where the roof has a fire resistance rating less than necessary to contain an expected fire, means of protection should be provided in accordance with Table 4.3.8.2, taking into consideration the fire stability of the roof assembly involved, the fuel it could contribute, including roof insulation and covering, and its tendency to inhibit flaming through the roof.

4.3.8.6 Subject to 4.3.8.4 and 4.3.8.5, the number of stories expected to contribute to flaming through the roof should be considered to be the top story together with those stories that are successively located beneath the top story and are not separated from it, as indicated in 4.3.3.

4.3.8.7 High attic spaces should be counted as a story and be subject to 4.3.8.4 and 4.3.8.5. Where the height of the attic is low, interpolation between the values provided in Table 4.3.8.2 should be made.

Chapter 5 Means of Protection

5.1 Types.

Various means of protecting buildings from fire damage resulting from exterior exposure, listed as follows in no specific order with regard to adequacy, should be considered:

- (1) Buildings
 - (a) Clear space between buildings
 - (b) Total automatic sprinkler protection
- (2) Walls
 - (a) Blank walls of noncombustible materials
 - (b) Barrier walls (self-supporting) between the building and exposure
 - (c) Extension of exterior masonry walls to form parapets or wings
 - (d) Automatic outside water curtains for combustible walls
- (3) Wall openings
 - (a) Elimination of openings by filling with equivalent construction
 - (b) Glass block panels in openings
 - (c) Wired glass in steel sash (fixed or automatic closing) in openings
 - (d) Automatic or deluge sprinklers outside over openings
 - (e) Automatic (rolling steel) fire shutters on openings
 - (f) Automatic fire doors on door openings
 - (g) Automatic fire dampers on wall openings

5.2 Additional Protection.

5.2.1 Additional means of protection that can be developed, such as double-glazed glass in metal sash, flame-retardant coatings, and other arrangements, also should be considered.

5.2.2 Any additional means of protection should be approved before being implemented.

5.3 Evaluation of Protection.

In evaluating the suitability of any of the types of protection specified in Section 5.1, the adverse effects of convected heat, flame impingement, and small flying brands associated with winds, as well as the beneficial effects of fire department operations, have been considered. Large flying brands have not been considered.

5.4 Selecting the Means of Protection.

The means of protection selected should be approved for the individual application and should be installed in accordance with appropriate standards (e.g., fire doors installed in accordance with NFPA 80, *Standard for Fire Doors and Fire Windows*; automatic sprinklers installed in accordance with NFPA 13, *Standard for the Installation of Sprinkler Systems*).

5.5 Manual Operation.

Manually operated window shutters or sprinklers should not be used. The excessive time needed to close or activate them at the time of a fire incident and the fact that the property exposed could be vacant or uninhabited at the time of the fire incident make their value questionable.

5.6 Application of Means of Protection.

The various means of protection to reduce the separation distances indicated in Table 4.3.7.3 and Table 4.3.8.2 should be applied in accordance with the guidelines provided in 5.6.1.

5.6.1 Separation Adjustments. Table 5.6.1(a) through Table 5.6.1(e) should be used for adjusting the separation distances derived from Table 4.3.7.3 and Table 4.3.8.2.

**Table 5.6.1(a) Frame or Combustible Exposed
Exterior Walls**

Means of Protection	Separation Distance Adjustment
Replace with blank fire-resistive wall (3-hour minimum)	Reduce to 0 m (0 ft)
Install automatic deluge water curtain over entire wall with no windows, with wired glass windows, or with windows closed by ¾-hour protection	Reduce to 1.5 m (5 ft)
Install automatic deluge water curtain over entire wall with ordinary glass windows	Reduce by 50 percent

Table 5.6.1(b) Frame or Combustible Exposed Exterior Wall [*I* Greater than 12.5 kW/m² (0.3 cal/cm² · sec or 66 Btu/ft² · min)] with Openings

Means of Protection	Separation Distance Adjustment
Replace with blank fire-resistive wall (3-hour minimum)	Reduce to 0 m (0 ft)
Install automatic deluge water curtain over entire wall with no windows, with wired glass windows, or with windows closed by ¾-hour protection	Reduce to 1.5 m (5 ft)
Install automatic deluge water curtain over entire wall with ordinary glass windows	Reduce by 50 percent
Close all wall openings with material equivalent to wall, or close with ¾-hour protection and eliminate combustible projections that have <i>I</i> less than wall	Reduce in accordance with 4.3.7.2

Table 5.6.1(c) Noncombustible Exposed Exterior Wall (Fire Resistance Less Than 3 Hours)

Means of Protection	Separation Distance Adjustment
Replace wall with blank fire-resistive wall (3-hour minimum)	Reduce to 0 m (0 ft)
Close all wall openings with material equivalent to wall, or close with ¾-hour protection and eliminate combustible projections	Reduce by 50 percent
Install automatic deluge water curtain over entire wall with no windows, with wired glass windows, or with windows closed by ¾-hour protection	Reduce to 1.5 m (5 ft)
Install automatic deluge water curtain on all wall openings equipped with ordinary glass and on combustible projections	Reduce by 50 percent
Install listed automatic window sprinklers in accordance with their listings	Reduce by 50 percent

**Table 5.6.1(d) Veneered Exposed Exterior Wall
[Combustible Construction Covered by a
Minimum of 100 mm (4 in.) of Masonry]**

Means of Protection	Separation Distance Adjustment
Replace wall with blank fire-resistive wall (3-hour minimum)	Reduce to 0 m (0 ft)
Close all wall openings with ¾-hour protection and eliminate combustible projections	Reduce by 50 percent
Close all wall openings with material equivalent to wall construction and eliminate combustible projections	Reduce to 1.5 m (5 ft)
Install automatic deluge water curtain over windows equipped with wired glass or over ¾-hour closed openings and on combustible projections	Reduce to 1.5 m (5 ft)
Install automatic deluge water curtain over windows equipped with ordinary glass and on combustible projections	Reduce by 50 percent
Install listed automatic window sprinklers in accordance with their listings	Reduce to 1.5 m (5 ft)

**Table 5.6.1(e) Fire-Resistive Exposed Exterior
Wall (Minimum 3-Hour Rating)**

Means of Protection	Separation Distance Adjustment
Close all openings with material equivalent to wall or protect all wall openings with 3-hour protection	Reduce to 0 m (0 ft)
Protect all openings with ¾-hour protection	Reduce by 75 percent [max. recommended = 3 m (10 ft)]
Protect all wall openings with ¾-hour protection	Reduce by 50 percent [max. recommended = 6 m (20 ft)]
Install automatic deluge water curtain on all wall openings with wired glass or with ¾-hour or 1½-hour protection	Reduce to 1.5 m (5 ft)

Install automatic deluge water curtain on all wall openings equipped with ordinary glass	Reduce by 50 percent
Install listed automatic window sprinklers in accordance with their listings	Reduce by 75 percent

5.6.2 Combustible Eaves. Combustible eaves, cornices, and other exterior ornamentation on exposed buildings should be treated as unprotected openings, in accordance with 5.6.1.

5.6.3* Protected Exposing Building. Where the exposing building or structure is protected throughout by an approved, properly maintained automatic sprinkler system of adequate design for the hazard involved, no exposure hazard should be considered to exist.

5.6.4* Protected Exposed Building. Where the exposed building or structure is protected throughout by an approved, properly maintained automatic sprinkler system of adequate design for the hazard involved, the exposure hazard to the total exposed building and its contents should be considered to be substantially reduced.

Annex A Explanatory Material

Annex A is not a part of the recommendations of this NFPA document but is included for informational purposes only. This annex contains explanatory material, numbered to correspond with the applicable text paragraphs.

A.3.2.1 Approved. The National Fire Protection Association does not approve, inspect, or certify any installations, procedures, equipment, or materials; nor does it approve or evaluate testing laboratories. In determining the acceptability of installations, procedures, equipment, or materials, the authority having jurisdiction may base acceptance on compliance with NFPA or other appropriate standards. In the absence of such standards, said authority may require evidence of proper installation, procedure, or use. The authority having jurisdiction may also refer to the listings or labeling practices of an organization that is concerned with product evaluations and is thus in a position to determine compliance with appropriate standards for the current production of listed items.

A.3.2.2 Authority Having Jurisdiction. The phrase “authority having jurisdiction” is used in NFPA documents in a broad manner, since jurisdictions and approval agencies vary, as do their responsibilities. Where public safety is primary, the authority having jurisdiction may be a federal, state, local, or other regional department or individual such as a fire chief; fire marshal; chief of a fire prevention bureau, labor department, or health department; building official; electrical inspector; or others having statutory authority. For insurance purposes, an insurance inspection department, rating bureau, or other insurance company representative may be the authority having jurisdiction. In many circumstances, the property owner or his or her designated agent assumes the role of the authority having jurisdiction; at government installations, the commanding officer or departmental official may be the authority having jurisdiction.

A.3.3.2 Exposure Severity. For the purposes of this document, *exposure severity* has been

defined as “the intensity of an exposing fire.” Exposure severity is intended to be a measure of the radiation level developed per unit window area by the exposing fire. It represents a combination of radiation emitted through the window itself as well as that produced from the flames that project out the window and up the front of the building. Thus, because radiant transfer from the flames as well as from the interior room walls is involved, the flame emissivity, dependent on fuel character as well as flame dimensions, could be of great importance.

The emission of flames and hot gases from the window of a room or building compartment during a fire could result from the establishment of a thermal pump. The pump is created by buoyancy differences between the hot combustion products and the surrounding outside ambient air, and it provides a positive means for furnishing fresh air to the fire and discharging flames and combustion products through the window. If the room involved is provided with only a single window and no internal source of air, the window serves the dual purpose as a passage for the entry of fresh air and the discharge of flames and other hot combustion products. If, however, an internal duct or passage is available for the supply of fresh air to the fire room, a much larger fraction of the window can be used effectively for the discharge of flaming gases. Winds also could significantly influence the ventilation behavior of a building fire and thus the exposure severity.

In addition to ventilation, a number of other system variables influence exposure severity. The most important of these are as follows:

- (1) The combustible load, including both the occupancy and building construction combustibles
- (2) The fuel dispersion or surface-to-volume ratio of the fuel
- (3) The size, geometry, and surface-to-volume ratio of the room involved
- (4) The thermal properties, conductivity, specific heat, and density of the interior finish

The current state of the art of fire protection engineering is such that it is not possible to define clearly how all or even a few of these variables interact to influence exposure severity. However, this general discussion provides a guide to trends.

A.3.3.4 Pilot Ignition. In practice, a glowing ember or a flash of flame could constitute a high-temperature ignition source, which often serves to ignite the flammable gases and volatiles. This mechanism differs from spontaneous ignition by radiation in which there is no local high-temperature igniting source and for which higher intensities of radiation are necessary.

A.4.3.7 Separation Distances. Table 4.3.7.3 determines the separation distance necessary between two buildings so that pilot ignition of the exposed building or its contents is unlikely, assuming no means of protection are installed in connection with either building. Guide numbers are obtained from this table.

Table 4.3.7.3 is based on a maximum tolerable level of incident radiation (I) at the facade of an unprotected exposed building of 12.5 kW/m^2 ($0.3 \text{ cal/cm}^2 \cdot \text{sec}$ or $66 \text{ Btu/ft}^2 \cdot \text{min}$), assuming the facade is constructed of typical cellulosic materials.

Derivation of Table 4.3.7.3. The principles underlying the derivation of the separations specified in Table 4.3.7.3 are discussed in detail in “Fire and the Spatial Separation of Buildings” (McGuire, 1966).

The spread of fire from one building to another across a vacant space can be caused by convective or radiative heat transfer or flying brands. The hazard created by large flying brands was not a consideration in these recommendations. Convective heat transfer is also disregarded where the source of hazard is associated with openings in the facade of the exposing building, because ignition by radiation can occur at distances substantially greater than those at which flame impingement and convective heat transfer usually constitute a hazard. Therefore, ignition as a result of radiative heat transfer is the event that these recommendations are intended to combat.

The applicable equation that expresses the relationship for radiant heat transfer is $I = I_0\Phi$, or the intensity at an exposed building is equal to the unit intensity at the exposing building multiplied by the configuration factor (Φ), based on radiator size, geometry, and spatial distance.

The maximum tolerable level of radiation (I) at the facade of an unprotected exposed building has been established as 12.5 kW/m² (0.3 cal/cm² · sec or 66 Btu/ft² · min). This value, originally derived from work of the Joint Fire Research Organization in the United Kingdom, is now generally accepted as that below which the pilot ignition of most cellulosic materials is unlikely to occur. Substantially higher levels of radiation are necessary to cause spontaneous ignition. It is believed that a local high-temperature ignition source usually is present; thus the selection of pilot ignition is indicated. Where materials are located in an enclosure irradiated through a small opening, appreciably lower levels can cause ignition. This factor has been ignored because irradiation times of more than 30 minutes usually are involved.

Since Table 4.3.7.3 was created, new building materials, other than cellulosic products (wood), having greater or lesser ability to resist ignition have been developed. Greater separation distances are needed for materials with greater propensity to ignite. Those offering greater resistance to ignition can be separated at lesser distances.

Information on the radiation levels (I_0) near burning buildings was established by a number of case histories and by a series of experimental burns known as the “St. Lawrence Burns.” The most important findings of the latter experiments were that radiation levels were related to the percentage of openings in building walls and that combustible interior walls or ceiling linings give rise to particularly high levels of radiation outside the building.

Another notable conclusion of the St. Lawrence Burns was that maximum radiation levels were not greatly affected by the type of exterior covering. In all the experiments, the exterior walls were not close to penetration by the fire during times of maximum radiation.

The St. Lawrence Burns produced maximum levels of radiation so high that protection against them would involve unduly large distances of separation. However, much lower levels prevailed for at least the first 20 minutes. It was decided to base separation distance recommendations on these lower values. It was believed that the likelihood of fire department attendance at an early stage of a fire justified this approach. Subsequently, a

field incident has confirmed that the recommended separations cannot be considered universally adequate and that an unusual combination of adverse conditions could allow fire spread even where the recommended separation distances are used.

In calculating the recommended separations, a uniform rectangular radiator has been assumed, the emissive power being taken as proportional to the percentage of window openings. The expression for the configuration factor, Φ , of a rectangular radiator at an elemental receiving surface (i.e., the ratio of the radiant intensity at the receiver to that at the radiator) is as follows:

$$\Phi = \frac{2}{\pi} \left[\frac{x}{\sqrt{x^2 + y^2}} \arctan \left(\frac{z}{\sqrt{x^2 + y^2}} \right) + \frac{z}{\sqrt{y^2 + z^2}} \arctan \left(\frac{x}{\sqrt{y^2 + z^2}} \right) \right]$$

where:

x = half-length of rectangular radiating surface

z = half-height of rectangular radiating surface

y = separation distance between radiator and receiving surface

Three levels of radiation hazard from a burning building were considered: light, moderate, and severe. For light, moderate, and severe hazard levels, configuration factors of 0.14, 0.07, and 0.035, respectively, were adopted.

An additional value of 1.5 m (5 ft) was added to the computed values of separation distance to account for the horizontal projection of flames from windows and to guard against the risk of ignition by direct flame impingement where small separations are involved.

Uniformity of Openings. The derivation of Table 4.3.7.3 assumes that openings are uniformly distributed on the facade and that the separation (blank wall) between openings is small (i.e., no more than one-third of the separation between the buildings). Where this is not the case, insufficient spatial separations can be predicted. The following measures remedy this deficiency substantially:

- (1) Where an area of the facade includes a large number of windows, a separate calculation should be made with respect to the smallest rectangle conveniently including all the windows in this area. In many cases, a single window constitutes this rectangle. The spatial separation chosen for this area should be the largest value determined by any of the calculations involving the windows for the area.
- (2) Where the separation (blank wall) between openings is appreciably more than one-third of the separation between the buildings (as provisionally estimated), an additional calculation for a single window should be made. If a higher building spatial separation results, this value should be used.

It is fundamental to the derivation of Table 4.3.7.3 that a row of results relating to a percentage of window openings of less than 20 percent (severe hazard), 10 percent (moderate hazard), or 5 percent (light hazard) is not valid for inclusion in the table.

Separations less than those provided by the first row of the table can, however, often be derived by considering individual windows or groups of windows. The radiation level opposite a particular point on a facade is hardly influenced by radiation from a region of the facade further removed from the point than twice the estimated separation between buildings recommended. If windows or groups of windows are separated by more than this distance (which is likely if the percentage of openings is small), individual calculations are considered to be valid. The resulting building separations then can be used even though they need to be lower than those that would be predicted in association with a large area of facade and the smallest percentage opening area provided by the table.

A.4.3.8 *Derivation of Table 4.3.8.2.* NFPA searched its photographic records of building fires in which flames penetrated the roof. Of the thousands of photographs examined, 176 showed flames above roofs at what appeared to be maximum or near maximum heights. No significant correlation between flame height and occupancy was apparent, and, in fact, the principal relationship was the number of stories involved in the fire. Table A.4.3.8 provides the average of the flame heights illustrated in some of the records. This table is reproduced from the May 1968 issue of *Fire Journal*.

Table A.4.3.8 Average Heights of Flames Penetrating Roofs

Number of Stories Burning	Flame Height (in Stories) Above Roof
1	1.4
2	1.8
3	2.2
4	2.6
5	2.9
6	3.1

The relationships shown in Table A.4.3.8 do not agree with those suggested by British and Japanese work based on theory and experiments, which, in general, would produce much higher values. The NFPA study does indicate that flame heights can be great under unusual circumstances, such as the heavy involvement of liquid fuels. The recommendations provided here are not intended to provide adequate protection under such circumstances.

In the event of a moderate wind, flames can be expected to extend horizontally for as great a distance as they might otherwise extend upward. For this reason, protection is recommended where the separation between two buildings is no more than the height to which the flames could otherwise extend.

Varying reductions in separation distance for blank fire-resistive walls with less than 3-hour ratings have not been made, because current test data are insufficient to evaluate appropriate reductions properly. It is hoped that future studies and tests will produce varying reductions with varying resistance ratings. Three-hour, fire-resistance-rated walls are assumed to be clad with noncombustible material.

A.5.6.3 Where the exposing building is properly protected by automatic sprinklers, a fire in that building is assumed to be controlled, and exposure, therefore, is also assumed to be controlled.

A.5.6.4 Where the exposed building is properly protected by automatic sprinklers, ignition within the exposed building is possible where separation distances are less than those recommended or where means of protection are not provided on exposed openings, walls, or projections with lesser separation distances. Such an ignition, however, is assumed to be controlled by sprinklers in the exposed structures.

Where water curtain protection is provided for exposed openings in sprinklered buildings, as recommended in 5.6.1, such sprinklers could be located on the inside of the building, adjacent to the opening being protected and in a position where the sprinkler can sense the exposing fire. Under these conditions, such sprinklers could be of the closed type supplied by the wet pipe system within the building. Their water demand, however, should be calculated in addition to or separate from the demand of the remainder of the system.

Annex B Example

This annex is not a part of the recommendations of this NFPA document but is included for informational purposes only.

B.1 Application of NFPA 80A.

Annex B provides an example of the application of NFPA 80A to a typical building exposure scenario as shown in Figure B.1.

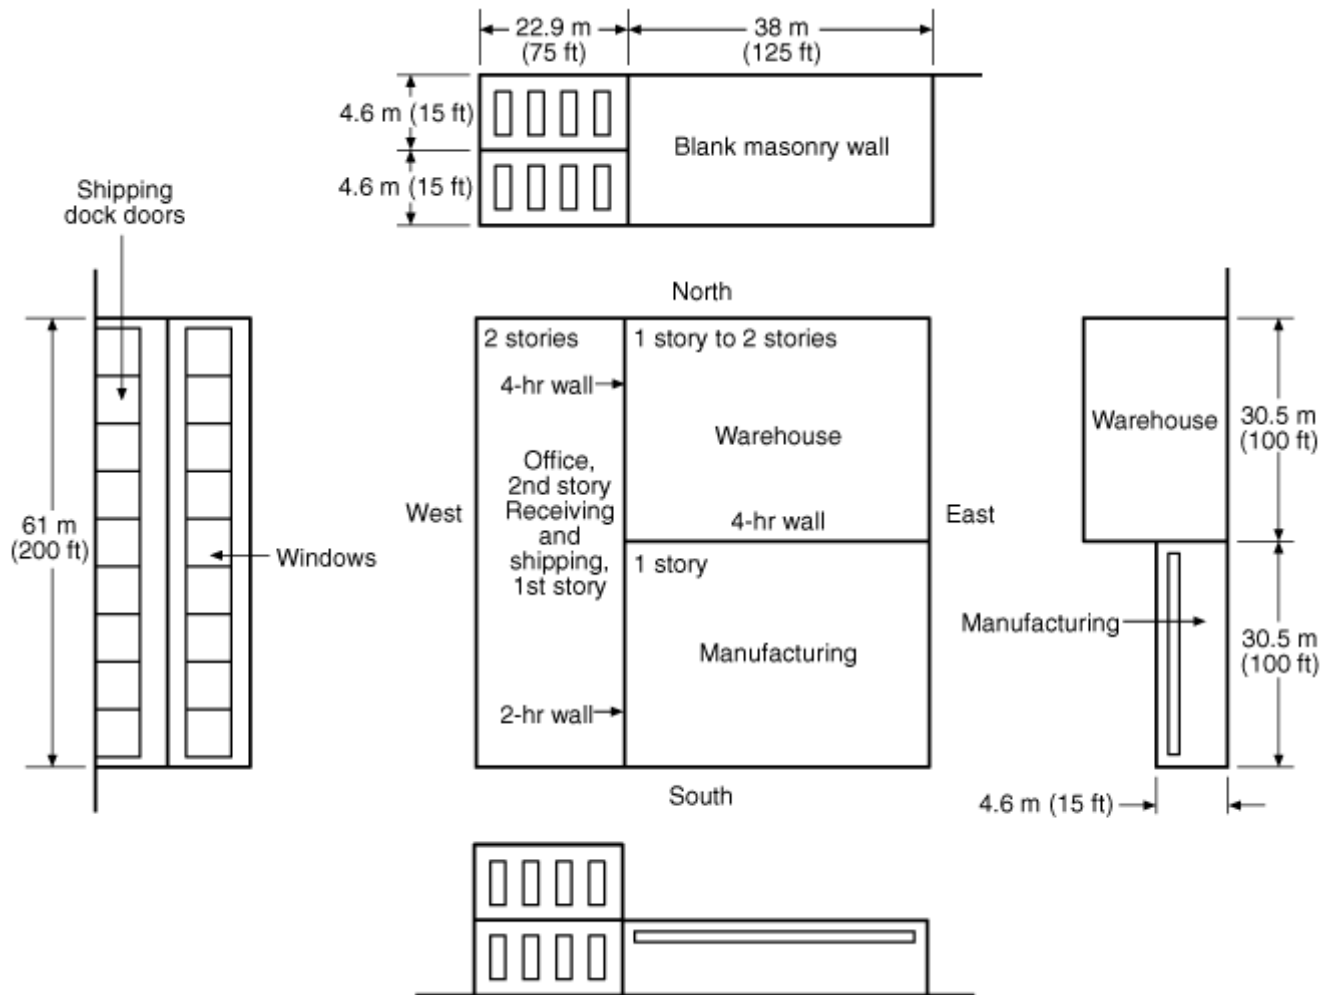


FIGURE B.1 Example of building exposure scenario.

Construction:

Walls: North — 4-hour openings as illustrated

South — 4-hour openings as illustrated

West — 4-hour openings as illustrated

East — Nonrated wall

Floors: Reinforced concrete — 3 hours

Floor openings: 2-hour enclosures

Roof: 2 hours

Interior finish: Noncombustible, except ceiling of office has a flame spread rating of 100

Occupancy:

Second floor: Office

First floor: Receiving and shipping

Manufacturing — electronic parts

Warehouse — palletized storage to 7.9 m (26 ft) in height

Analysis of Exposure:

North:

Width of exposing fire, w — 22.9 m (75 ft) (The blank wall casts no exposure, and the wall is of sufficient fire resistance to contain the expected fire.)

Height of exposing fire, h — 4.6 m (15 ft). [The floor is of sufficient fire resistance to contain the expected fire, and openings are protected. If openings in the floor are unprotected, h is 9.1 m (30 ft).]

Severity (from Table 4.3.7.3 and Table 4.3.8.2):

Office fire loading — light

Average interior finish — moderate

Shipping and receiving fire loading — moderate

Interior finish — light

Severity — moderate

w/h or h/w — 22.9 m/4.6 m (75 ft/15 ft) = 5

Percentage of openings — 30 percent

Guide number (from Table 4.3.7.3) — 1.85

Separation distance — $[1.85 \times 4.6 \text{ m (15 ft)}] + 1.5 \text{ m (5 ft)} = 8.5 \text{ m (28 ft)} + 1.5 \text{ m (5 ft)} = 10 \text{ m (33 ft)}$

South:

Exposure hazard from the two-story section of the building is the same as the north wall. The one-story section then should be calculated.

Width of exposing fire, w — 38 m (125 ft)

Height of exposing fire, h — 4.6 m (15 ft)

Severity (from Table 4.3.7.3 and Table 4.3.8.2):

Fire loading — moderate

Interior finish — light

Severity — moderate

w/h or h/w — 38 m/4.6 m (125 ft/15 ft) = 8.3

Percentage of openings — 20 percent

Guide number (from Table 4.3.7.3) — 1.32

Separation distance — $[1.32 \times 4.6 \text{ m (15 ft)}] + 1.5 \text{ m (5 ft)} = 6 \text{ m (20 ft)} + 1.5 \text{ m (5 ft)} = 7.6$

m (25 ft)

Separation distance from south wall, therefore, should be 10 m (33 ft) (the recommended separation distance from the two-story section, which is calculated as greater than that from the one-story section).

West:

Width, w — 61 m (200 ft)

Height, h — 4.6 m (15 ft)

Severity — moderate

w/h or h/w — $61 \text{ m}/4.6 \text{ m}$ (200 ft/15 ft) = 13.3

Percentage of openings — 80 percent

Guide number — 5.04

Separation distance — $[5.04 \times 4.6 \text{ m} (15 \text{ ft})] + 1.5 \text{ m} (5 \text{ ft}) = 23 \text{ m} (75.6 \text{ ft}) + 1.5 \text{ m} (5 \text{ ft}) = 24.6 \text{ m} (80.6 \text{ ft})$

East:

Manufacturing area:

Width, w — 30.5 m (100 ft)

Height, h — 4.6 m (15 ft)

Severity — moderate

w/h or h/w — $30.5 \text{ m}/4.6 \text{ m}$ (100 ft/15 ft) = 6.7

Percentage of openings — 100 percent (nonrated wall)

Guide number — 4.89

Separation distance — $[4.89 \times 4.6 \text{ m} (15 \text{ ft})] + 1.5 \text{ m} (5 \text{ ft}) = 22.4 \text{ m} (73.4 \text{ ft}) + 1.5 \text{ m} (5 \text{ ft}) = 23.9 \text{ m} (78.4 \text{ ft})$

Warehouse:

Width, w — 30.5 m (100 ft)

Height, h — 9.1 m (30 ft)

Severity (from Table 4.3.7.3 and Table 4.3.8.2):

Fire loading — severe

Interior finish — light

Severity — severe

w/h or h/w — $30.5 \text{ m}/9.1 \text{ m}$ (100 ft/30 ft) = 3.3

Percentage of openings — 100 percent

Guide number — 5.27

Separation distance — $[5.27 \times 9.1 \text{ m (30 ft)}] + 1.5 \text{ m (5 ft)} = 48.1 \text{ m (158.1 ft)} + 1.5 \text{ m (5 ft)} = 49.7 \text{ m (163.1 ft)}$

Annex C Informational References

C.1 Referenced Publications.

The following documents or portions thereof are referenced within this recommended practice for informational purposes only and are thus not part of the recommendations of this document unless also listed in Chapter 2.

C.1.1 NFPA Publication. National Fire Protection Association, 1 Batterymarch Park, P.O. Box 9101, Quincy, MA 02269-9101.

Fire Protection Handbook, 18th ed., 1997.

C.1.2 Other Publications. (Reserved)

C.2 Informational References.

The following documents or portions thereof are listed here as informational resources only. They are not a part of the recommendations of this document.

Bird, E. L., and Docking, S. J. *Fire in Buildings*. Van Nostrand, New York.

Browne, F. L. 1958. "Theories of the Combustion of Wood and Its Control." Report No. 2136, Forest Products Laboratory, U.S. Department of Agriculture, Madison, WI.

Bruce, H. D. 1959. "Experimental Dwelling-Room Fires." Report No. 1941, reaffirmed 1965, Forest Products Laboratory, U.S. Department of Agriculture, Madison, WI.

Butcher, E. G., Chitty, T. B., and Ashton, L. A. 1966. "The Temperatures Attained by Steel in Building Fires." Fire Research Technical Paper No. 15, Ministry of Technology and Fire Offices Committee, Joint Fire Research Organization, Her Majesty's Stationery Office, London.

"Conflagrations in America Since 1900," *NFPA Quarterly*, vol. 44, no. 4, Part 2, April 1951.

Eickner, H. W. 1962. "Basic Research on the Pyrolysis and Combustion of Wood." (Technical Paper 107, Forest Products Laboratory, U.S. Department of Agriculture, Oct. 1961), *Forest Products Journal*, vol. 12, no. 4, 194–199.

Fire Research 1958, Report of the Fire Research Board with the Report of the Director of Fire Research for the Year 1958–1959, Department of Scientific and Industrial Research and Fire Offices Committee, Her Majesty's Stationery Office, London (out of print).

Giedt, W. H. 1957. *Principles of Engineering Heat Transfer*. Van Nostrand, New York.

Gross, D., and Robertson, A. F. 1965. "Experimental Fire in Enclosures, Fire Research." *Tenth Symposium (International) on Combustion*, Combustion Institute, Pittsburgh, PA,

931–942.

Ingberg, S. H. 1942. “Fire Resistance Classifications of Building Constructions.” Building Materials and Structures Report BMS 92, U.S. Department of Commerce, National Bureau of Standards, Washington, DC.

Ingberg, S. H., Dunham, J. W., and Thompson, J. P. 1957. “Combustible Contents in Buildings.” Building Materials and Structures Report BMS 149, U.S. Department of Commerce, National Bureau of Standards, Washington, DC.

Keough, J. J. 1963. “Diagrams for the Approximate Assessment of Radiation Exposure Hazards from Fires in Buildings.” UP 153, Commonwealth Experimental Building Station, Commonwealth Department of Works, Chatswood, N.S.W., Australia.

Langdon-Thomas, G. J. and Law, M. 1966. “Fire and the External Wall.” Fire Note No. 8, Ministry of Technology and Fire Offices Committee, Joint Fire Research Organization, Her Majesty's Stationery Office, London.

Law, M. 1963. “Heat Radiation from Fires and Building Separation.” Fire Research Technical Paper No. 5, Department of Scientific and Industrial Research and Fire Offices Committee, Joint Fire Research Organization, Her Majesty's Stationery Office, London.

Law, M. 1968. “Radiation from Fires in a Compartment.” Fire Research Technical Paper No. 20, Ministry of Technology and Fire Offices Committee, Joint Fire Research Organization, Her Majesty's Stationery Office, London.

Lawson, D. I. 1952. “Ignition of Wood by Radiation.” *British Journal of Applied Physics*, vol. 3, no. 9, 288–292.

“Life Hazard of Interior Finishes (Development of Method).” Report No. 11760, June 1950, and “Life Hazard Tests on Wood Interior Finish.” Report No. 11975, Oct. 1951, Factory Mutual Laboratories, reproduced 1952, National Lumber Manufacturing Association, Washington, DC.

Los Angeles Fire Department 1961. *Operation School Burning*, No. 2.

McGuire, J. H. 1966. “Fire and the Spatial Separation of Buildings.” Reprinted from *Fire Technology*, vol. 1, no. 4, Technical Paper No. 212, NRC 8901, National Research Council of Canada, Division of Building Research, Ottawa, 278–287.

McGuire, J. H. 1953. “Heat Transfer by Radiation.” Fire Research Special Report No. 2, Department of Scientific and Industrial Research and Fire Offices Committee, Her Majesty's Stationery Office, London.

McGuire, J. H. 1965. “Ignition of Materials Behind Common $\frac{1}{8}$ -Inch-Thick Window Glass.” Technical Note No. 456, National Research Council of Canada, Division of Building Research, Ottawa.

Moysey, E. B. 1965. “Space Separation for Prevention of Farm Fire Spread.” *Fire Technology*, vol. 1, no. 1, 62–68.

Moysey, E. B., and Muir, W. E. 1968. “Pilot Ignition of Building Materials by Radiation.” *Fire Technology*, vol. 4, no. 1, 46–50.

Muir, W. E., Moysey, E. B. and Scott, W. A. 1966. "Ignition of Some Building Materials." Canadian Society of Agricultural Engineers.

Nelson, H. E. 1968. "Radiant Energy Transfer in Fire Protection Engineering Problem Solving." *Fire Technology*, vol. 4, no. 3, 196–205.

Ross, D. 1967. "Field Burnout Tests of Apartment Dwelling Units." Building Science Series No. 10, U.S. Department of Commerce, National Bureau of Standards, Washington, DC.

Salzberg, F. and Waterman, T. E. 1966. "Studies of Building Fires with Models." *Fire Technology*, vol. 2, no. 3, 196–203.

Scott, W. A. 1964. "Spacing of Farm Buildings for Fire Control." University of Saskatchewan.

Shorter, G. W. et al. 1960. "The St. Lawrence Burns." NFPA Reprint Q53-17, *Quarterly of the National Fire Protection Association*, vol. 53, no. 4, 300–316.

Simms, D. L. 1963. "On the Pilot Ignition of Wood by Radiation." *Combustion and Flame*, vol. 7, no. 9, 253–261.

Simms, D. L. and Law, M. 1967. "The Ignition of Wet and Dry Wood by Radiation." *Combustion and Flame*, vol. 11, no. 5, 377–388.

Thomas, P. H. 1963. "Size of Flames from Natural Fires, Colloquium on Modeling Principles." *Ninth Symposium (International) on Combustion*, Academic Press: New York, 844–859.

Wilkes, G. B. 1950. *Heat Insulation*, Wiley, New York.

Yokoi, S. 1960. "Study of the Prevention of Fire Spread Caused by Hot Upward Current." Report No. 34, Building Research Institute, Ministry of Construction, Japan.

C.3 References for Extracts.

The following document is listed here to provide reference information, including title and edition, for extracts given throughout this recommended practice as indicated by a reference in brackets [] following a section or paragraph. This document is not a part of the recommendations of this document unless also listed in Chapter 2 for other reasons.

NFPA 220, *Standard on Types of Building Construction*, 1999 edition.

[Click here to view and/or print an Adobe® Acrobat® version of the index for this document](#)